



Overall and installation dimensions

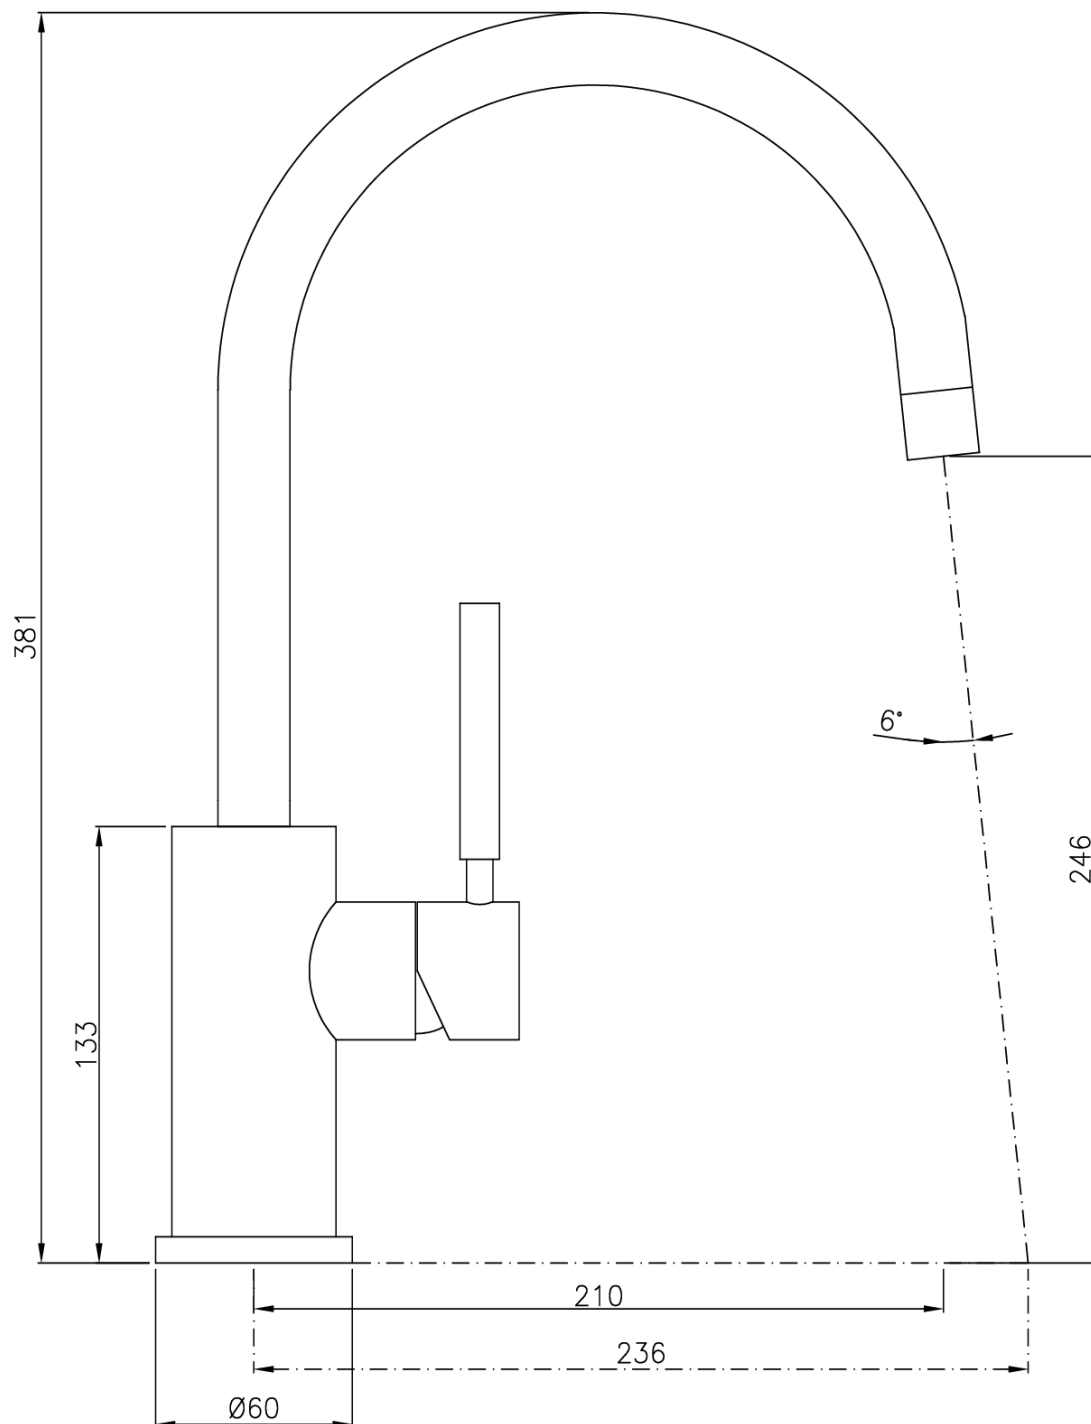

Overall and installation dimensions

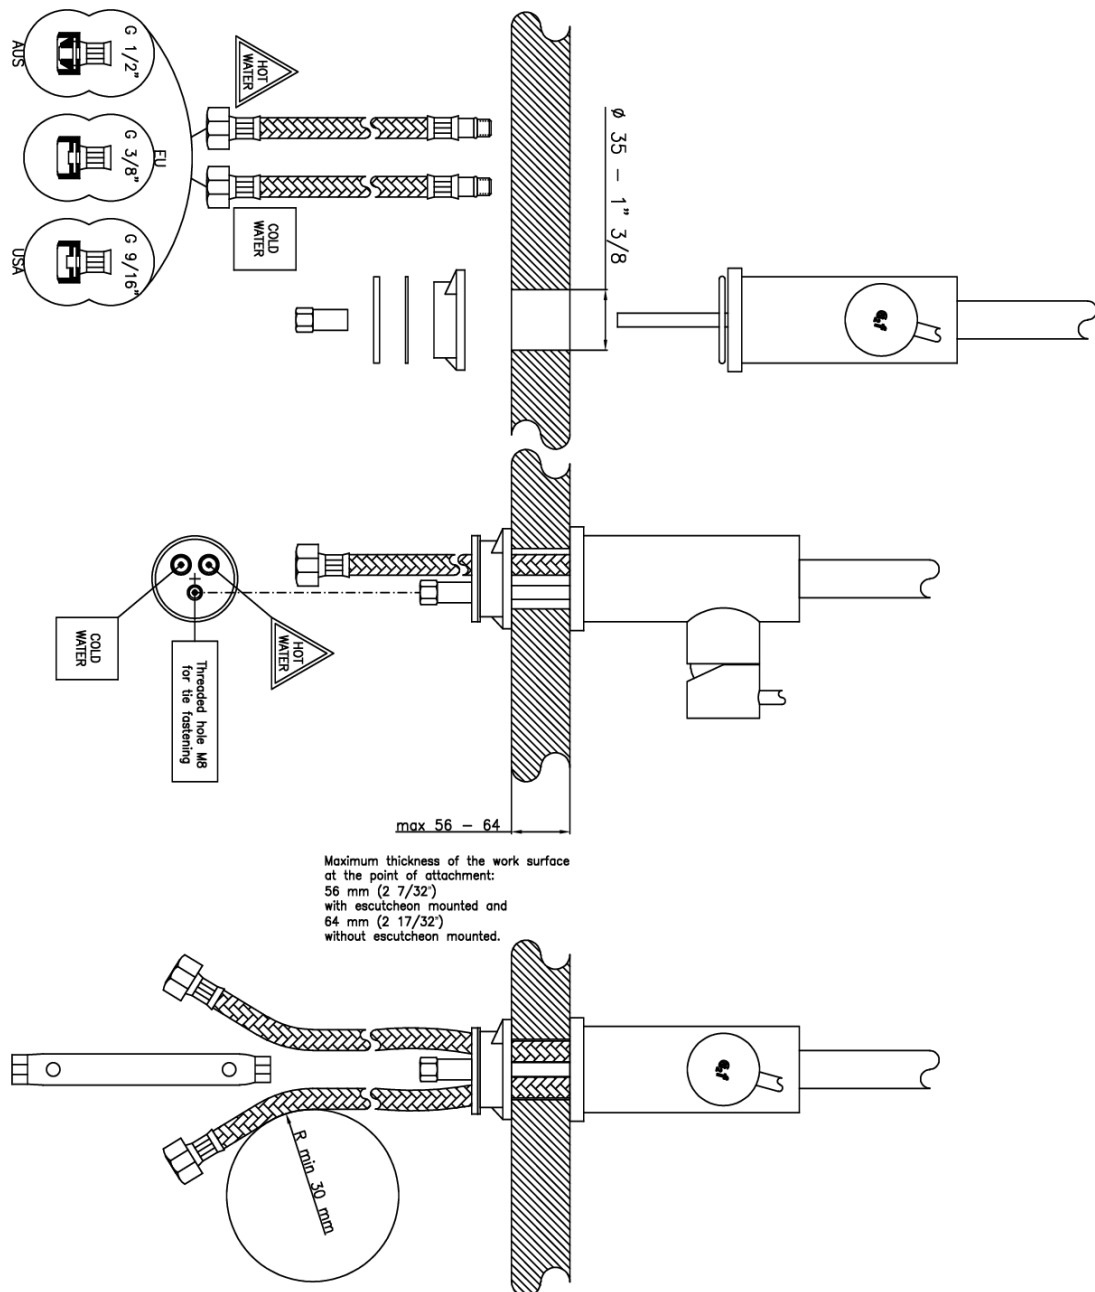

Installation Guide

Preparation

1. **Rinse supply pipes thoroughly before installing the tap, to clear any debris from the supply lines (Mandatory).**
2. Install two isolating stop valves (angle valves/undersink taps) with filter between the wall attachment and the flexible hoses (Recommended)

Check List

1. Temperature of hot water inlet → Recommended: 60 °C (140 °F) <> Maximum: 75 °C (167 °F)
2. Water Pressure → Recommended: 3 bar (300kPa – 43.5 PSI) <> Range from min. 1 bar (100kPa – 14.5 PSI) to max. 5 bar (500kPa – 72.5 PSI)
3. Install upstream a pressure reducing valve (PRV) calibrated at 3/3.5 bar (300/350kPa) (Recommended)
4. Balancing the pressure of hot and cold water (Recommended)
5. Tap installing hole diameter: 35mm (1 3/8")
6. The maximum thickness of the work surface at the point of attachment may be of 56 mm (2 7/32") with escutcheon mounted and 64 mm (2 17/32") without escutcheon mounted.

Assembling

1. Insert the inlet flexible hoses (24) into the correct holes and tighten **by hand**. With the lever in front position, the hot water flexible hose will be on the left and the cold water hose on the right. Insert and screw the tie fastening (21)
2. Introduce the flexible hoses into the hole Ø35 and support the tap in the correct position. Be sure that the gasket sealant (17) is in the correct position under the escutcheon (16).
3. Point the spout to the opposite side of the control lever in order to achieve a better balance of the tap in later stages of attachment
4. Insert in the following order onto the tie fastening (21): the white flange (18) (through the latter have to pass also flexible hoses), the horseshoe gasket / mounting flange (19+20) and finally the mounting nut (22) slightly tighten by hand. Make sure the tap is in the correct position, with the control lever correctly positioned on the right. Securely tighten the mounting nut (22) using the wrench supplied (23).
5. Connect the two flexible hoses (24) to the water supply (preferably with two stop valves with filter upstream).
6. Turn on water supply (hot and cold).
7. Carefully check the installation for leaks.

Commissioning

1. Remove the aerator/flow controller and flush the water through the tap for several seconds, to clear any debris from the supply lines and then reinstall the aerator/flow controller.
2. Ensure that the aerator/flow controller incorporated in the outlet is tightened to prevent removal by hand.
3. Run the hot and cold water for a few seconds and ensure that the complete installation is operating correctly before considering accomplished the installation and then use the system.

IMPORTANT NOTES FOR PLUMBERS

Once the installation is complete, please ensure this document is retained by the Customer.



Care & Maintenance

1. When necessary, clean the tap by using warm water and mild soap and then dry with a soft cloth.
Clean matt surfaces in the direction of the grain and not across it.
2. For even better results, purchase the A2F cleaning kit specifically for stainless steel.
3. Never use the following to clean A2F taps:
 - a) disinfectants containing bleach (sodium hypochlorite)
 - b) cleaning products containing chlorides
 - c) products containing acids or alcohol
 - d) powders or abrasive cleaners
 - e) flakes of steel or abrasive sponge;
4. Periodically clean the aerator/flow controller filter



BOM

